

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R1	DASHBOARD/RIGHT REAR CONNECTION
R2	DASHBOARD/LEFT REAR CONNECTION
R3	DASHBOARD/DRIVER'S DOOR CONNECTION
R4	DASHBOARD/PASSENGER'S DOOR CONNECTION
R6	DASHBOARD/CENTRAL CONSOLE CONNECTION
R7	DASHBOARD/RADIO CONNECTION
R8	RIGHT-HAND ROOF/DASHBOARD CONNECTION
R9	DASHBOARD/FRONT PANEL CONNECTION
R11	DASHBOARD/LEFT-HAND SIDE MEMBER CONNECTION
R12	RIGHT REAR/RIGHT-HAND REAR DOOR CONNECTION
R13	LEFT REAR/LEFT-HAND REAR DOOR CONNECTION
R15	LEFT REAR/LEFT-HAND TAILGATE CONNECTION
R16	LEFT-HAND REAR/REAR CROSS MEMBER WIRING CONNECTION
R17	HEATING/ENGINE BEAM
R20	ENGINE/IGNITION
R21	ENGINE/FAN CONNECTION
R22	AUTOMATIC GEARBOX/ENGINE WIRING HARNESS CONNECTION
R23	ANTI-POLLUTION / ENGINE WIRING CONNECTION
R24	ENGINE/INJECTION CONNECTION
R25	ENGINE/POSITIVE STARTUP CONNECTION
R27	ENGINE WIRING CONNECTION / RIGHT-HAND SIDE MEMBER
R28	ENGINE WIRING CONNECTION / LEFT-HAND SIDE MEMBER
R30	FRONT RIGHT-HAND SEAT/CENTRAL CONSOLE WIRING CONNECTION
R31	FRONT LEFT-HAND SEAT/CENTRAL CONSOLE WIRING CONNECTION
R33	FRONT SIDE/BUMPER
R34	ENGINE/DASHBOARD CONNECTION
R35	PEDAL ASSEMBLY/DASHBOARD CONNECTION
R36	ANTI-LOCK BRAKING SYSTEM/DASHBOARD CONNECTION
R37	ENGINE/INJECTION CONNECTION
R38	DASHBOARD/LEFT-HAND ROOF CONNECTION
R39	LEFT-HAND REAR/REAR CROSS MEMBER WIRING CONNECTION
R40	RIGHT-HAND REAR/REAR CROSSMEMBER CONNECTION
R42	FRONT FACE/RIGHT-HAND REPEATER
R46	ENGINE WIRING CONNECTION/BODYWORK EARTH
R56	ENGINE/BONNET WIRING CONNECTION
R57	UNDERBODY/DASHBOARD
R59	FAN ASSEMBLY WIRING / INJECTION WIRING CONNECTION
R62	INJECTION/ENGINE REGULATION
R64	ENGINE INTERCONNECTION UNIT / INJECTION WIRING CONNECTION
R65	INJECTION/HEATING CASING
R67	FRONT OF ENGINE/ENGINE CONNECTION
R70	INJECTION/TURBO BEARING COOLANT PUMP CONNECTION
R72	DASHBOARD/ELECTRIC AERIAL WIRING CONNECTION
R75	FAN UNIT EARTH / FAN UNIT CONNECTION
R76	LEFT-HAND SIDE REPEATER/LEFT-HAND HEADLIGHT WIRING CONNECTION
R77	RIGHT-HAND SIDE REPEATER/RIGHT-HAND HEADLIGHT WIRING CONNECTION
R82	ENGINE WIRING/AIR CONDITIONING WIRING CONNECTION
R84	FRONT WIRING/CHARGING SOCKET CONNECTION
R89	DASHBOARD-BRAKE PAD WEAR WARNING LIGHT CONNECTION
R98	UNDER BODY WIRING / ENGINE WIRING HARNESS CONNECTION
R99	DASHBOARD/HEATING CONNECTION
R101	ANTI-LOCK BRAKING SYSTEM WIRING/REAR WHEEL SENSORS WIRING CONNECTION
R103	BOOT LID WIRING CONNECTON/BOOT LID CONTROL

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R105	BODY / REAR RIGHT-HAND SCREEN INTERMEDIATE CONNECTION
R106	FRONT OF ENGINE/BUMPER CONNECTION
R107	DASHBOARD/FRONT OF ENGINE CONNECTION
R108	DASHBOARD/CONSOLE CONNECTION
R110	ENGINE/ENGINE FRONT ADDITIONAL CONNECTION
R111	DASHBOARD/ENGINE FRONT ADDITIONAL CONNECTION
R112	FRONT OF ENGINE/BODYWORK CONNECTION
R114	DASHBOARD/DECODER COMPUTER EXTENSION CABLE CONNECTION
R115	ENGINE/ENGINE HARNESS CONNECTION
R116	ENGINE/PETROL PUMP CONNECTION
R121	ALARM WIRING/FRONT RIGHT-HAND WIRING CONNECTION
R122	DASHBOARD WIRING HARNESS / FOG LIGHT CONNECTION
R123	CENTRAL CONSOLE/RADIO WIRING UNION
R124	DASHBOARD WIRING HARNESS CONNECTION/INTERMEDIATE RADIO
R125	RADIO/INTERMEDIATE RADIO
R126	FAN UNIT / AIR CONDITIONING CUT-OFF RELAY CONNECTION
R129	BODYWORK/HORN COMPRESSOR CONNECTION
R132	DASHBOARD/DAYTIME RUNNING LIGHTS WIRING CONNECTION
R134	DASHBOARD WIRING/ADDITIONAL TRAILER
R135	REAR RH AUXILIARY WIRING / DASHBOARD
R136	LEFT-HAND REAR DOOR/RIGHT-HAND REAR ADDITIONAL CONNECTION
R137	RIGHT-HAND REAR DOOR/RIGHT-HAND REAR ADDITIONAL CONNECTION
R139	ENGINE/ABS WIRING CONNECTION
R141	COURTESY LIGHT WIRING CONNECTION / FRONT
R142	ENGINE/DIESEL INJECTION PUMP CONNECTION
R143	RIGHT-HAND SIDE REPEATER/RIGHT-HAND SIDE MEMBER WIRING CONNECTION
R144	LEFT-HAND SIDE REPEATER/LEFT-HAND SIDE MEMBER WIRING CONNECTION
R146	DASHBOARD WIRING HARNESS / FRONT SEAT CONNECTION
R149	ENGINE/LEFT-HAND FRONT WING CONNECTION
R152	PASSENGER COMPARTMENT/RIGHT-HAND FRONT WING CONNECTION
R153	PASSENGER COMPARTMENT/DRIVER'S DOOR CONNECTION
R154	PASSENGER COMPARTMENT/PASSENGER DOOR CONNECTION
R155	PASSENGER COMPARTMENT/LEFT-HAND REAR DOOR CONNECTION
R156	PASSENGER COMPARTMENT/RIGHT-HAND REAR DOOR CONNECTION
R157	PASSENGER COMPARTMENT/TAILGATE CONNECTION
R158	PASSENGER COMPARTMENT/RIGHT-HAND ROOF CONNECTION
R159	PASSENGER COMPARTMENT/CENTRAL CONSOLE CONNECTION
R162	SEAT/SENSORS WIRING CONNECTION
R164	FAN/DASHBOARD CONNECTION
R169	REAR LEFT-HAND/UNDER BODY WIRING CONNECTION 3
R170	REAR LIGHTS WIRING CONNECTION / REGISTRATION PLATE LIGHTING
R172	WINDSCREEN WASHER/DASHBOARD CONNECTION
R173	DASHBOARD / SEQUENTIAL GEARBOX CONTROLS ON STEERING WHEEL CONNECTION
R176	DASHBOARD/STORAGE COMPARTMENT CONNECTION
R178	LUGGAGE COMPARTMENT DOOR/LUGGAGE COMPARTMENT DOOR INTERMEDIATE CONNECTION
R179	INTEGRATED CYLINDER HEAD-ENGINE CONNECTION
R181	PASSENGER COMPARTMENT/PEDAL ASSEMBLY CONNECTION
R182	PASSENGER COMPARTMENT /RADIO
R183	PASSENGER COMPARTMENT/ANTI-LOCK BRAKING SYSTEM CONNECTION
R185	LIGHT/LICENSE PLATE LIGHT INTERMEDIATE WIRING CONNECTION
R186	DASHBOARD/INTERMEDIATE FR BR CONNECTION
R187	PASSENGER COMPARTMENT/CENTRAL COURTESY LIGHT CONNECTION
R193	LUGGAGE COMPARTMENT DOOR/REAR RIGHT-HAND INTERMEDIATE CONNECTION

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R197	HEATED SEATS/DASHBOARD WIRING CONTROL
R198	ROOF CONSOLE WIRING CONNECTION
R200	TAILGATE/TAILGATE ASSISTANCE CONNECTION
R210	DASHBOARD/BUMPER CONNECTION
R212	ENGINE/PASSENGER COMPARTMENT (SINGLE UNIT) CONNECTION
R216	LEFT REAR/FUEL GAUGE INTERMEDIARY CONNECTION
R217	FUEL GAUGE INTERMED/PASSENGER COMPART WIRING UNION
R218	INTERMEDIATE FUEL PUMP
R219	DASHBOARD WIRING/LH REAR DOOR WIRING CONNECTION
R220	DASHBOARD WIRING/RH REAR DOOR WIRING CONNECTION
R221	DASHBOARD/SINGLE UNIT CONNECTION
R224	PINKING CORRECTION ADJUSTMENT EARTH
R226	EGR SOLENOID VALVE AND INJECTION PUMP (COLD START DEVICE) ADVANCE WIRING
R227	FRONT PANEL/HEADLIGHT WASHER INTERMEDIARY CONNECTION
R228	PASSENGER COMPARTMENT/KICK-DOWN SWITCH CONNECTION
R229	DASHBOARD/HEATED JET INTERMEDIARY CONNECTION
R230	CAR PHONE CONNECTION
R232	REAR LEFT-HAND REAR RIGHT-HAND CONNECTION
R233	CARAVAN CONNECTION
R234	DASHBOARD/ACCELEROMETER WIRING CONNECTION
R235	DASHBOARD/AUTOMATIC GEARBOX CONNECTION
R236	LEFT REAR/REGISTRATION PLATE LIGHTING CONNECTION
R237	ENGINE ANTI-LOCK BRAKING SYSTEM/UNDERBODY ANTI-LOCK BRAKING SYSTEM CONNECTION
R238	REAR LEFT-HAND /DRIVER'S DOOR WIRING UNION
R240	HEATED WINDSCREEN/DASHBOARD CONNECTION
R241	RAISED BRAKE LIGHT/LEFT-HAND REAR CONNECTION
R242	DASHBOARD/VARIABLE SHOCK ABSORBER CONNECTION
R243	RIGHT-HAND REAR DOOR/REAR LEFT-HAND WIRING CONNECTION
R244	LEFT-HAND REAR/LUGGAGE COMPARTMENT LID CONNECTION
R245	TAILGATE/HEATED REAR SCREEN WIRING
R246	REAR WIRING CONNECTION / REAR SEAT 2
R247	VARIABLE/INTERMEDIATE SHOCK ABSORBER WIRING
R248	REAR WIRING CONNECTION / REAR SEAT 3
R250	TAILGATE/REGISTRATION PLATE LIGHTING CONNECTION
R251	DASHBOARD/CAR PHONE CONNECTION
R252	DASHBOARD/ALARM KEY EXTENSION CABLE CONNECTION
R254	DASHBOARD/WATER BOX CONNECTION
R255	ANTI-LOCK BRAKING SYSTEM/WATER BOX CONNECTION
R256	HEATED WINDSCREEN/WATER BOX CONNECTION
R257	DASHBOARD/AUTOMATIC GEARBOX CONNECTION
R259	PASSENGER COMPARTMENT/REAR BUMPER CONNECTION
R260	PASSENGER COMPARTMENT/LEFT-HAND ROOF CONNECTION
R261	UCH / HEATING DUCTING
R262	PASSENGER COMPARTMENT/ENGINE CONNECTION
R264	PASSENGER COMPARTMENT / RH TAILGATE
R265	PASSENGER COMPARTMENT/FRONT PANEL CONNECTION
R266	PASSENGER COMPARTMENT/BUMPER CONNECTION
R268	PASSENGER COMPARTMENT/BRAKE PAD WEAR INTERMEDIATE WIRING CONNECTION
R269	INTERMEDIATE FUEL GAUGE/UNDER BODY ABS
R270	PASSENGER COMPARTMENT/FRONT RIGHT-HAND SEAT CONNECTION
R271	PASSENGER COMPARTMENT/FRONT LEFT-HAND SEAT CONNECTION
R272	ENGINE/EQUIPMENT BOLT
R273	SELF-LEVELLING SUSPENSION INTERMED. WIRING/CARAVAN WIRING CONNCTN

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R275	PASSENGER COMPARTMENT/FAN ASSEMBLY CONNECTION
R276	PASSENGER COMPARTMENT/TRAILER
R277	PASSENGER COMPARTMENT/DRIVER'S PRETENSIONER CONNECTION
R278	PASSENGER COMPARTMENT/PASSENGER PRETENSIONER CONNECTION
R279	PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY CONNECTION
R280	REAR/BONNET COVER CONNECTION
R282	ENGINE/INDEPENDENT HEATING CONNECTION
R283	ENGINE /BATTERY COVER
R284	ENGINE WIRING/CHARGING SOCKET CONNECTION
R287	ENGINE/WHEEL SPEED ECU WIRING CONNECTION
R291	PASSENGER COMPARTMENT/IGNITER CONNECTION
R292	PASSENGER COMPARTMENT/PASSENGER AIR BAG
R295	REAR RIGHT/UNDERBODY CONNECTION
R296	PASSENGER COMPARTMENT/REAR RIGHT CONNECTION
R297	PASSENGER COMPARTMENT/REAR LEFT CONNECTION
R298	UCH /ADDITIONAL RADIO
R299	FRONT AND REAR EQUIPMENT WIRING SOCKET
R300	PRE-HEATER PLUGS/ENGINE CONNECTION
R301	DASHBOARD/COURTESY LIGHT CONNECTION
R302	VENTILATION UNIT CONNECTION/ROOF
R303	NAVIGATION ASSISTANCE/PASSENGER COMPARTMENT CONNECTION
R304	ADDITIONAL LIQUIFIED PETROLEUM GAS RESERVOIR/PASSENGER COMPARTMENT
R305	ENGINE WIRING/STARTER SOLENOID VALVE
R306	ENGINE/AUXILIARY LPG CONNECTION
R308	LPG ADDITIONAL WIRING/INJECTOR SIMULATOR MODULE INTERMEDIATE WIRING CONNECTION
R309	ABS/INTERMEDIATE ABS CONNECTION
R312	PASSENGER COMPARTMENT MONOBLOC/REAR LEFT CONNECTION
R313	REAR LEFT/COMPARTMENT CONNECTION
R314	ABS/ABS CONNECTION
R315	PASSENGER COMPARTMENT/DISCHARGE BULB RANGE ADJUSTER SENSOR CONNECTION
R316	PASSENGER COMPARTMENT/UNDERBODY
R318	DASHBOARD/STEERING COLUMN CONNECTION
R319	REAR/REAR BUMPER CONNECTION
R320	PASSENGER COMPARTMENT/GEARBOX CONNECTION
R322	FRONT SUNROOF WIRING/REAR SUNROOF
R323	SEAT / RIGHT-HAND SEAT ELECTRICAL FUNCTIONS
R324	SEAT / LEFT-HAND SEAT ELECTRICAL FUNCTIONS
R325	PASSENGER COMPARTMENT/AFTER-MARKET ALARM WIRING CONNECTION
R326	PASSENGER COMPARTMENT/ABS VACUUM GENERATION TOOL CONNECTION
R327	SUNROOF WIRING / REAR LEFT-HAND
R328	PASSENGER COMPARTMENT/PASSENGER COMPARTMENT FAN ASSEMBLY 1
R329	PASSENGER COMPARTMENT/PASSENGER COMPARTMENT FAN ASSEMBLY 2
R330	DASHBOARD/RIGHT-HAND SIDE DOOR CONNECTION
R331	ROOF/LEFT-HAND SIDE DOOR CONNECTION
R332	LUGGAGE COMPARTMENT LID REAR LEFT-HAND/INTERMEDIATE WIRING CONNECTION
R333	LUGGAGE COMPARTMENT LID/LUGGAGE COMPARTMENT LID INTERMEDIATE WIRING CONNECTION
R334	PASSENGER COMPARTMENT/PASSENGER FRONT SEAT CONNECTION
R335	PASSENGER COMPARTMENT/DRIVER'S FRONT SEAT CONNECTION
R336	REAR LEFT-HAND / UNDERBODY CONNECTION
R337	FRONT PASSENGER DOOR/INTERMEDIATE HANDLE CONNECTION
R338	DRIVER'S POSITION / HANDS-FREE KIT
R339	ROOF / SUNROOF
R340	PASSENGER COMPARTMENT / EMERGENCY STOP

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R341	DRIVER'S SEAT / FLOOR
R342	PASSENGER SEAT / FLOOR
R344	DASHBOARD / FRONT PASSENGER AIRBAG CONNECTION
R345	LPG TANK / REAR LEFT-HAND
R346	DASHBOARD/FLOOR CONNECTION
R347	REAR LEFT-HAND WIRING / REAR LEFT-HAND
R348	REAR / DISCHARGE LAMP
R349	PARKING AID / REAR BUMPER
R350	UNDERBODY / SELF-CONTAINED HEATER
R351	CHECK TYRE PRESSURE / PASSENGER COMPARTMENT
R353	SUNROOF/LUGGAGE COMPARTMENT DOOR WIRING CONNECTION
R354	UCH / AUXILIARY AIRBAG
R355	PASSENGER COMPARTMENT / LEFT-HAND TAILGATE CONNECTION
R356	PASSENGER COMPARTMENT WIRING / CONSOLE WIRING CONNECTION
R357	UCH / PARKING-AID
R358	PARKING AID / TOWING SETTING
R359	RIGHT-HAND REAR LIGHT /TOWING CONNECTION
R360	LEFT-HAND REAR LIGHT /TOWING CONNECTION
R361	UCH / AUXILIARY HEATED WINDSCREEN
R362	UCH / AUXILIARY FUEL FILLER FLAP
R363	INSTRUMENT PANEL / SAFETY
R364	PASSENGER COMPARTMENT/DVD PLAYER INTERFACE
R365	SEAT / DRIVER'S SEAT INTERMEDIARY WIRING
R366	SEAT / INTERMEDIATE FRONT PASSENGER SEAT
R367	REAR / DASHBOARD SECURITY WIRING CONNECTION
R368	PASSENGER COMPARTMENT CENTRAL CONSOLE WIRING / DASHBOARD WIRING CONNECTION
R369	DASH BOARD / MULTIMEDIA CONNECTION
R370	DASHBOARD/PARKING BRAKE ELECTRIC UNLOCKING WIRING CONNECTION
R371	MULTIMEDIA/REAR WIRING CONNECTION
R372	REAR / FASCIA BAND CONNECTION
R374	REAR LEFT-HAND WIRING / FRONT WIRING HARNESS CONNECTION
R375	ENGINE WIRING / ADDITIONAL HEATER PLUGS
R376	FRONT RIGHT-HAND SEAT CONNECTION
R377	FRONT LEFT-HAND SEAT CONNECTION
R378	CONSOLE WIRING REAR WIRING SOCKET
R380	DASHBOARD/SPECIAL FEATURES WIRING CONNECTION
R381	PASSENGER COMPARTMENT/ADDITIONAL SPECIAL FEATURES WIRING CONNECTION
R382	MOBILE ROOF ARCH / REAR LEFT-HAND CONNECTION
R383	CAR PHONE SPEAKER / PASSENGER COMPARTMENT CONNECTION
R384	DASHBOARD/POWER TAKE-OFF INTERMEDIATE WIRING CONNECTION
R385	CHARGING SOCKET / CHARGING SOCKET INTERMEDIATE WIRING CONNECTION
R386	CHASSIS/DIFFERENTIAL LOCK WIRING CONNECTION
R387	DASHBOARD/LEFT-HAND ROOF LIGHTS WIRING CONNECTION
R388	4X4 INDICATOR SWITCH
R389	OPTIONAL SPECIAL FEATURES WIRING CONNECTION
R390	ENGINE / VACUUM PUMP CONNECTION
R391	REAR SCREEN WIRING REAR WIRING SOCKET
R392	REGISTRATION PLATE LIGHTING / FASCIA BAND CONNECTION
R393	AERIAL / DASHBOARD CONNECTION
R394	REAR LEFT/ROOF CONNECTION
R395	MULTIMEDIA/CONSOLE WIRING CONNECTION
R396	DRIVER'S POSITION WIRING/CAN NETWORK CONNECTION
R397	MULTIMEDIA/ROOF CONNECTION

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R398	HORN/PASSENGER COMPARTMENT WIRING CONNECTION
R399	DASHBOARD/DISCHARGE BULB RANGE ADJUSTER SENSOR CONNECTION
R400	DASHBOARD WIRING/4-WHEEL DRIVE AND ELECTRONIC PARKING BRAKE WIRING CONNECTION
R401	HEATED SCREEN/LUGGAGE COMPARTMENT LID WIRING CONNECTION
R402	DASHBOARD WIRING/DRIVER'S SEAT WIRING CONNECTION
R403	CONNECTION FOR DASHBOARD WIRING HARNESS / FRONT PASSENGER SEAT
R404	LOWER LIGHTS/ROOF
R405	RIGHT-HAND UNDER BODY/DASHBOARD
R406	LEFT-HAND UNDER BODY/DASHBOARD
R407	REAR COURTESY LIGHT/RIGHT-HAND ROOF
R408	NAVIGATION/DASHBOARD CONNECTION
R409	DRIVER'S SIDE REAR SECURITY/PASSENGER COMPARTMENT
R410	PASSENGER SIDE REAR SECURITY/PASSENGER COMPARTMENT
R411	REAR LEFT-HAND BUMPER/LOWER LIGHTS
R412	REAR RIGHT-HAND BUMPER/LOWER LIGHTS
R413	REAR/TOWING SOCKET
R414	MULTIMEDIA/PASSENGER COMPARTMENT WIRING CONNECTION
R415	MULTIMEDIA/PASSENGER COMPARTMENT WIRING CONNECTION 2
R416	MULTIMEDIA/PASSENGER COMPARTMENT WIRING CONNECTION 3
R417	PASSENGER COMPARTMENT / PTC HEATING WIRING CONNECTION
R418	PTC 2 PASSENGER COMPARTMENT/HEATING WIRING CONNECTION
R419	PASSENGER COMPARTMENT WIRING CONNECTION / REAR RIGHT-HAND WIRING 2
R420	REAR LEFT-HAND WIRING / PASSENGER COMPARTMENT WIRING CONNECTION 2
R421	PASSENGER COMPARTMENT/UNDERBODY 2
R422	FRONT END PANEL/FRONT WIRING CONNECTION
R423	REAR LEFT-HAND WIRING / DASHBOARD WIRING CONNECTION 2
R424	REAR LEFT-HAND WIRING/DASHBOARD WIRING CONNECTION 3
R425	FRONT WIRING CONNECTION / FRONT END PANEL 2
R427	AIRBAG/RIGHT-HAND SEAT WIRING CONNECTION
R428	AIRBAG/LEFT-HAND SEAT WIRING CONNECTION
R429	UNDERBODY/BRAKE PAD WEAR WIRING CONNECTION
R430	HANDS-FREE MICROPHONE/ROOF CONNECTION
R432	MULTIMEDIA/REAR CAMERA WIRING CONNECTION
R433	ENGINE HARNESS / SEQUENTIAL GEARBOX CONNECTION
R434	REAR WIRING/MULTIMEDIA WIRING CONNECTION 2
R436	FRONT END WIRING/DASHBOARD WIRING CONNECTION 2
R437	DASHBOARD WIRING/ENGINE WIRING CONNECTION 2
R438	REAR LEFT-HAND/REAR PARCEL SHELF CONNECTION
R439	SUNROOF WIRING/REAR LEFT-HAND WIRING CONNECTION 2
R440	CONNECTION FOR REAR FOG LIGHT WIRING / TOWING SOCKET
R441	HEATING / REAR WIRING CONNECTION
R444	PASSENGER COMPARTMENT HEATING WIRING 1 / FRONT WIRING CONNECTION
R445	PASSENGER COMPARTMENT HEATING WIRING 2 / FRONT WIRING CONNECTION
R447	ALARM SIREN / FRONT WIRING CONNECTION
R448	ALARM ULTRASOUND UNIT / DASHBOARD WIRING CONNECTION
R449	DASHBOARD/RIGHT REAR 2
R450	DASHBOARD/RIGHT REAR 3
R451	DASHBOARD/RIGHT REAR 4
R454	DASHBOARD/LEFT REAR 4
R455	DASHBOARD/LEFT REAR 5
R456	DRIVER'S DOOR WIRING/DASHBOARD WIRING CONNECTION 2
R457	DRIVER'S DOOR WIRING/DASHBOARD WIRING CONNECTION 3
R459	FRONT PASSENGER DOOR WIRING/DASHBOARD WIRING CONNECTION 2

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R462	PEDALS/DASHBOARD 2
R463	PEDALS/DASHBOARD 3
R464	PEDALS/DASHBOARD 4
R466	PEDALS/DASHBOARD 6
R468	ENGINE WIRING / FRONT WIRING CONNECTION 2
R469	FRONT/ENGINE 3
R470	ENGINE WIRING / FRONT WIRING CONNECTION 4
R471	DASHBOARD/PASSENGER COMPARTMENT CENTRE CONSOLE 2
R472	DASHBOARD WIRING CONNECTION / PASSENGER COMPARTMENT CENTRAL CONSOLE 3
R473	DASHBOARD WIRING CONNECTION / PASSENGER COMPARTMENT CENTRAL CONSOLE 4
R474	DASHBOARD CONNECTION/PASSENGER COMPARTMENT CENTRAL CONSOLE 5
R475	DASHBOARD CONNECTION/PASSENGER COMPARTMENT CENTRAL CONSOLE 6
R476	FRONT RIGHT-HAND SEAT WIRING CONNECTION 2
R477	FRONT LEFT-HAND SEAT WIRING CONNECTION 2
R480	REAR LEFT-HAND WIRING / FRONT WIRING CONNECTION 2
R481	REAR LEFT-HAND / FRONT WIRING CONNECTION 3
R482	REAR LEFT-HAND / FRONT WIRING CONNECTION 4
R483	REAR LEFT-HAND WIRING CONNECTION / REAR LEFT-HAND DOOR 2
R484	REAR LEFT-HAND WIRING CONNECTION / REAR RIGHT-HAND DOOR 2
R485	DASHBOARD/REAR CAMERA CENTRAL UNIT WIRING CONNECTION
R486	REAR LEFT-HAND/UNDER BODY WIRING CONNECTION 2
R487	REAR LEFT-HAND QUARTER PANEL/REAR WIRING CONNECTION
R488	REAR RIGHT-HAND QUARTER PANEL/REAR WIRING CONNECTION
R489	REAR CAMERA CENTRAL UNIT/REAR CAMERA WIRING CONNECTION
R491	REAR WIRING CONNECTION / REAR LEFT-HAND WHEEL ARCH
R492	REAR LEFT-HAND WIRING CONNECTION / REAR LEFT-HAND WHEEL ARCH
R495	PASSENGER COMPARTMENT/PASSENGER PRETENSIONER
R496	PASSENGER COMPARTMENT/SEAT BELT WARNING LIGHT CONNECTION
R497	RIGHT-HAND SIDE LIGHT/REAR LEFT-HAND CONNECTION
R498	LEFT-HAND SIDE LIGHT/REAR LEFT-HAND CONNECTION
R499	SUNROOF/DASHBOARD WIRING CONNECTION
R500	REAR LEFT-HAND CONNECTION/TRACTION BATTERY COOLING SYSTEM
R501	MONOBLOC/PASSENGER COMPARTMENT CONNECTION
R507	SINGLE UNIT WIRING/PASSENGER COMPARTMENT WIRING CONNECTION 7
R508	REAR LEFT-HAND/SUNROOF RIGHT-HAND SIDE WIRING CONNECTION
R509	REAR LEFT-HAND/SUNROOF LEFT-HAND SIDE WIRING CONNECTION
R510	SEAT BASE/SEAT BACK WIRING CONNECTION (FRONT PASSENGER SEAT)
R511	SEAT BASE/SEAT BACK WIRING CONNECTION (DRIVER'S SEAT)
R512	SUNROOF RIGHT-HAND SIDE/DASHBOARD WIRING CONNECTION
R513	SUNROOF LEFT-HAND SIDE/DASHBOARD WIRING CONNECTION
R514	RIGHT-HAND SIDE ROLL HOOP/REAR LEFT-HAND WIRING CONNECTION
R515	LEFT-HAND SIDE ROLL HOOP/REAR LEFT-HAND WIRING CONNECTION
R516	REAR SEAT BELT BUCKLE/REAR LEFT-HAND WIRING CONNECTION
R517	REAR SEAT BELT BUCKLE 2/REAR LEFT-HAND WIRING CONNECTION
R518	HEATING/PASSENGER COMPARTMENT WIRING CONNECTION
R519	HEATING/PASSENGER COMPARTMENT WIRING CONNECTION 2
R520	ADDITIONAL AIR CONDITIONING/PASSENGER COMPARTMENT WIRING CONNECTION
R521	ADDITIONAL HEATING/UNDERBODY WIRING CONNECTION
R522	HEATING WIRING/HEATING CONTROL CONNECTION
R524	REAR LEFT-HAND CONNECTION/TRACTION BATTERY COOLING SYSTEM 2
R526	JUNCTION BOX WIRING/ENGINE WIRING CONNECTION
R527	JUNCTION BOX WIRING/ENGINE WIRING CONNECTION 2
R528	CHARGING SOCKET/JUNCTION BOX CONNECTION

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R529	JUNCTION BOX/AIR CONDITIONING CONNECTION
R530	RR RIGHT/RIGHT SLIDING SIDE DOOR ELECTRICAL CONNECTION MODULE WIRING CONNECTION
R531	REAR LEFT/LEFT SLIDING SIDE DOOR ELECTRICAL CONNECTION MODULE WIRING CONNECTION
R532	REAR RIGHT DOOR/RIGHT SLIDING SIDE DOOR ELECTRICAL CONNECTION MODULE WIRING
R533	REAR LEFT DOOR/LEFT SLIDING SIDE DOOR ELECTRICAL CONNECTION MODULE WIRING
R534	JUNCTION BOX WIRING/AIR CONDITIONING WIRING CONNECTION
R535	JUNCTION BOX/HEATING CONNECTION
R536	JUNCTION BOX WIRING/TRACTION MOTOR WIRING CONNECTION
R537	ELECTRONIC POWER UNIT/JUNCTION BOX CONNECTION
R538	JUNCTION BOX INTERNAL CONNECTION 1
R539	JUNCTION BOX INTERNAL CONNECTION 2
R540	JUNCTION BOX INTERNAL CONNECTION 3
R541	JUNCTION BOX INTERNAL CONNECTION 4
R542	JUNCTION BOX INTERNAL CONNECTION 5
R543	JUNCTION BOX INTERNAL CONNECTION 6
R544	JUNCTION BOX INTERNAL CONNECTION 7
R545	JUNCTION BOX INTERNAL CONNECTION 8
R546	JUNCTION BOX WIRING/TRACTION BATTERY WIRING CONNECTION
R547	AFTER-SALES STEERING/REAR LEFT-HAND CONNECTION
R548	FRONT WIRING CONNEXION / POWER STEERING
R549	FRONT WIRING CONNEXION / BUMPER 2
R550	REAR WIRING CONNECTION / REAR BUMPER 2
R552	FRONT WIRING CONNECTION / FRONT RIGHT-HAND SHOCK ABSORBER
R553	FRONT WIRING CONNECTION / FRONT LEFT-HAND SHOCK ABSORBER
R554	REAR WIRING CONNECTION / REAR RIGHT-HAND SHOCK ABSORBER
R555	REAR WIRING CONNECTION / REAR LEFT-HAND SHOCK ABSORBER
R556	FRONT WIRING CONNECTION / HEATING JET
R560	FRONT CAMERA/DASHBOARD CONNECTION
R562	REAR RIGHT-HAND WIRING CONNECTION / FRONT RIGHT-HAND SEAT
R563	REAR LEFT-HAND WIRING CONNECTION / FRONT LEFT-HAND SEAT
R564	FOUR-WHEEL STEERING CONNECTION 1
R565	FOUR-WHEEL STEERING CONNECTION 2
R566	FOUR-WHEEL STEERING CONNECTION 3
R569	FRONT WIRING CONNECTION / POWER-ASSISTED STEERING 2
R571	REAR SEATS/PASSENGER COMPARTMENT WIRING CONNECTION
R572	REAR LEFT-HAND SEAT/PASSENGER COMPARTMENT WIRING CONNECTION
R573	REAR RIGHT-HAND SEAT/PASSENGER COMPARTMENT WIRING CONNECTION
R574	RIGHT-HAND INDICATOR/FRONT WIRING CONNECTION
R575	LEFT-HAND INDICATOR/FRONT WIRING CONNECTION
R576	MONOBLOC/UNDERBODY CONNECTION
R578	ENGINE/UNDERBODY CONNECTION 2
R579	MOTOR/MONOBLOC CONNECTION 2
R580	DASHBOARD/DRIVING SCHOOL MONITOR UNIT WIRING CONNECTION
R581	REAR BUMPER/LEFT-HAND DIFFUSER WIRING CONNECTION
R583	DASHBOARD / HANDS-FREE ACCESS CONNECTION
R585	DOOR/INTERMEDIATE 1 WIRING CONNECTION
R591	MULTIMEDIA/AERIAL CONNECTION
R592	MULTIMEDIA/AERIAL 2 CONNECTION
R594	CHARGING SOCKET/UNDERBODY CONNECTION
R597	CONNECTION
R618	ROOF/ROOF CONSOLE CONNECTION
R620	REAR LEFT-HAND WIRING/LEFT-HAND INTERMEDIATE TAILGATE
R621	LEFT-HAND INTERMEDIATE TAILGATE/LEFT-HAND TAILGATE CONNECTION

LIST OF INLINE CONNECTORS

CONNECTION CODES	CONNECTION TITLES
R622	ENGINE CONNECTION/HIGH VOLTAGE DISTRIBUTION WIRING
R623	TAILGATE WIRING/TAILGATE ASSISTANCE WIRING CONNECTION
R624	REAR LEFT-HAND CONNECTION / CHARGING SOCKET > EXTERIOR ACCESSORIES
R625	CHARGING SOCKET CONNECTION > EXTERIOR ACCESSORIES / REAR BUMPER
R626	AUTO TRANSMISSION (POE)/ELECTRO-HYDRAULIC INTERFACE (POE) WIRING CONNECTION
R627	REAR SEAT/REAR WIRING CONNECTION
R628	INTERIOR LIGHTS/DASHBOARD WIRING CONNECTION 2
R629	INTERIOR LIGHTS/DASHBOARD WIRING CONNECTION 3
R630	MULTIMEDIA/DASHBOARD WIRING CONNECTION 2
R634	RIGHT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 2
R635	RIGHT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 3
R636	RIGHT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 4
R638	LEFT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 2
R639	LEFT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 3
R640	LEFT HAND ELECTRIC SEAT FUNCTIONS/SEAT WIRING CONNECTION 4
R642	HEATING SYSTEM/DASHBOARD WIRING CONNECTION 2
R645	WIRING CONNECTION FOR DASHBOARD/FRONT (MODULE A)
R646	FRONT WIRING B (MODULE B)/DASHBOARD WIRING CONNECTION
R647	FRONT WIRING C (MODULE C)/DASHBOARD WIRING CONNECTION
R652	FRONT WIRING/DASHBOARD WIRING CONNECTION 2
R653	FRONT WIRING/DASHBOARD WIRING CONNECTION 3
R654	FRONT WIRING/DASHBOARD WIRING CONNECTION 4
R655	STEERING COLUMN SWITCH/CRUISE CONTROL CONNECTION
R660	PASSENGER COMPARTMENT WIRING / FRONT WIRING CONNECTION
R661	PASSENGER COMPARTMENT WIRING CONNECTION / FRONT WIRING A (MODULE A)
R662	PASSENGER COMPARTMENT WIRING CONNECTION / FRONT WIRING B (MODULE B)
R663	PASSENGER COMPARTMENT WIRING CONNECTION / FRONT WIRING C (MODULE C)
R664	WIRING FOR PASSENGER COMPARTMENT/FRONT (MODULE D)
R665	FRONT WIRING/PASSENGER COMPARTMENT WIRING CONNECTION 2
R666	FRONT WIRING/PASSENGER COMPARTMENT WIRING CONNECTION 3
R668	DASHBOARD/PASSENGER COMPARTMENT WIRING CONNECTION
R669	HEATING WIRING/FRONT WIRING CONNECTION
R670	DASHBOARD/HEATING CONNECTION
R672	LEFT-HAND ROOF/PASSENGER COMPARTMENT WIRING CONNECTION 2
R673	PASSENGER COMPARTMENT/FRONT PANEL 2 CONNECTION
R674	ENGINE / EXPANSION VALVE CONNECTION
R675	MULTIMEDIA / MICROPHONE CONNECTION
R677	REAR LEFT/LEFT-HAND TAILGATE
R678	LEFT-HAND TAILGATE/LEFT-HAND ROOF
R679	REAR LEFT-HAND / REAR RIGHT-HAND WIRING CONNECTION
R683	REAR LEFT/LEFT-HAND TAILGATE 2
R684	REAR LEFT/LEFT-HAND TAILGATE 3
R685	REAR LEFT-HAND WIRING CONNECTION / LEFT-HAND TAILGATE 4
R687	LEFT-HAND ROOF WIRING / LEFT-HAND TAILGATE WIRING CONNECTION 2
R688	LEFT-HAND TAILGATE/LEFT-HAND ROOF 3
R690	REAR RIGHT-HAND SEAT/REAR WIRING CONNECTION
R691	CONNECTION BETWEEN TOWING WIRING / ADDED MOVABLE TOWBAR
R900	ADDITIONAL HEATER CASING/DASHBOARD
R999	CONNECTION USED FOR TEST
RBH	DASHBOARD/ 16-SEATER BUS ADDITIONAL 1 SEAT
RBI	DASHBOARD/ 16/9-SEATER BUS ADDITIONAL 2 SEATS
RBJ	16-SEAT BUS ADDIT 2 SEATS/PASSENGER COURTESY LIGHT
RIB	CONNECTION